Important Safety Instructions

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN!

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

1. To reduce the risk of electric shock, do not remove the cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.
2. The manufacturer should not hold responsibility for the damage caused by any substitutions and modifications of the product without authorization from the manufacturer or authorized unit.

WARNING

The device should not be exposed to dripping or splashing and no objects filled with liquids should be placed on the device.

To prevent the GPS from being damaged, be sure to keep the GPS out of direct sunlight or heat. Maintain well-ventilated conditions around the unit to avoid overheating.

Accessories

Accessories List

ITEM	NAME	QTY
	Car Charger	1
	Mounting Cradle	1
	USB Cable	1
	Stylus Pen	1
	Driver/Documentation CD	1
	User Manual	1
	Warranty Card	1

EN

View of Main Unit

Front and Side View

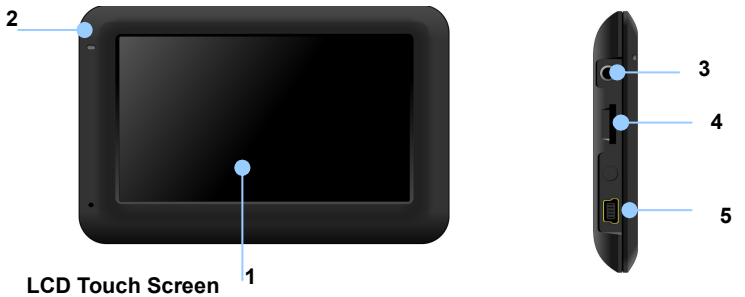

1. **LCD Touch Screen**
   Tap the screen with touch pen or finger to select menu commands or to enter information.

2. **Battery Status Indicator**
   The indicator glows in bright amber color when battery is fully charged and in red color when charging.

3. **Headphone Port**
   Connects to stereo headphones or headsets.

4. **microSD Slot**
   Receives microSD memory card for data access or memory expansion.

5. **Micro-USB Port**
   Connect to USB Cable for data access or battery charging.

View of Main Unit

Rear and Top View

1. **Speaker**
   Emits sound, voice or music.

2. **Stylus pen**

3. **Reset Button**
   Press to reset the device.

4. **Power Button**
   Press to power ON/OFF device.

Inserting microSD Card

- To insert a microSD card, place connector towards device and card label towards the front side of the device.
- To remove a microSD card, gently press the edge of the card to release the safety lock and pull the card out of the slot.

NOTE:
Please always make sure that no application is accessing the microSD card before extraction.

Connecting to External USB Device (Charging)

- Insert the mini USB connector into the appropriate mini USB port.
- Insert the other USB connector into the USB port on PC to start charging.

Device Connections

EN

Connecting to Earphones

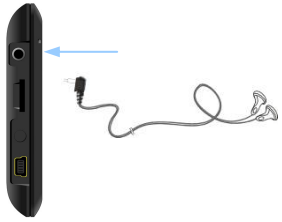

- Insert earphone jack (earphones not included) into the appropriate earphone port to switch audio output from device speaker to earphone.

NOTE:
High volume level is a potential risk to your hearing. Please turn down the volume before connecting the earphone and gradually turn up the volume to a comfortable level.

Connecting to Car Charger

- Insert USB connector into the appropriate USB port.
- Insert car charger connector into vehicle 12V accessory/cigarette socket to start charging.

NOTE:
Please connect the car charger to vehicle 12V accessory/cigarette socket after vehicle engine is started to protect the device from sudden surges in current.

Cautions on Battery Charging

About Rechargeable Battery

The device is equipped with a built-in rechargeable battery. Please fully charge the battery (for at least 8 hours) before initial use. The battery status indicator glows in red color when charging, and turns green color when the battery is full. Charging time is approximately 2 hours.

Working conditions and precautions for the rechargeable battery

- Device with new batteries should be fully charged before initial use.
- Battery should only be used and charged when temperatures are between 0° ~ 37°C.
- It is not necessary to start charging the device before the battery is fully discharged.

NOTE:
Please connect the car charger to vehicle 12V accessory/cigarette socket after vehicle engine is started to protect the device from sudden surges in current.

Using Mounting Cradle

Device Mounting Procedures

The device can be securely mounted on vehicle dashboard or windshield with the mounting cradle included. Please follow procedures below to install the mounting cradle:

1. Select an appropriate location on windshield or dashboard where the device and mounting cradle will not obstruct driver field of vision.
2. Please also make sure that the device has a clear view of sky to attain best GPS reception.

- Place the device on the bracket with the bottom positioned on the appropriate socket as illustrated by **Arrow 1**.
- Push on the top edge as illustrated by **Arrow 2** to securely install device onto the cradle.
- Lift the suction cup lever and press the suction cup at desired location.
- Press down the suction cup lever as illustrated by **Arrow 3** to secure the mounting cradle on the surface.
- Rotate the knob to adjust device to desired viewing angle.

To Dismount Device

1. Push the tap on top of the mounting cradle to release the device.
2. Lift the suction cup lever to easily remove the suction cup from windshield or dashboard.

Getting Started

1. Press and hold **Power Button** to turn on the device.
2. Shortly after the loading screen is shown, the main menu will be displayed.
3. Tap the corresponding buttons with touch pen included to navigate various functions.

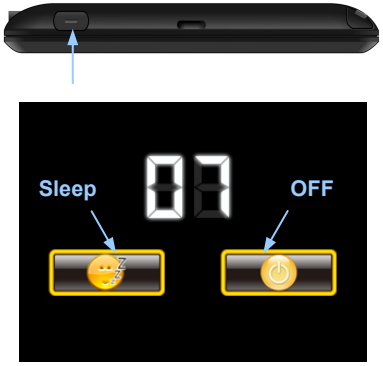

4. Press and hold **Power Button** to turn off the device or to allow the device to enter sleep mode.
5. Tap **Sleep** icon to enter sleeping mode or **OFF** icon to complete turn off the device.

Program interface

No.	Name	Function
1	Sound	Sound menu opens by pressing this button
2	Compass	Context menu opens by pressing this button. In this menu switches the orientation of the map («North up» - lock icon is next to the compass, «Rotate in accordance with the movement» - route is next to the compass), the type of card (Flat view «2D» and the Panoramic view of the «3D») and the skins («Night», «Day», «Auto»). When driving the compass always points to the North.
3	Information panel	A sign of the upcoming maneuver. There are various turns, distance to the next maneuver in meters or kilometers, etc. on a gray background. Clicking on the sign stops the route guidance and more route options.
4	Information panel	The estimated total time in a way, the total length of the route, time of arrival at the final point of the route.
5	Route	The active route.
6	GPS-cursor	Your location indicator.
7	Menu	Main menu opens by pressing this button.

EN

Program interface

No.	Name	Function
8	Progress-bar	Bar is filled in as you approach the place of maneuver.
9	Traffic lane	Displays the traffic lanes with valid maneuvers at the next intersection.
10	Information panel	Shows the name of the street you are currently driving along. Available only if GPS/GLONASS connection is established. If there is no street name, the direction will be shown.
11	Scale button	Zoom out.
12	Scale button	Zoom in.
13	Navitel.Events *	Navitel.Events button
14	Speed limit and camera	In excess of the established speed displays the speed limit on that road section. If warning of the cameras turned on in the settings, then when approaching the camera distance to it displays.
15	Battery	Icon shows the level of battery charge. Press it to see the remaining memory.
16	GPS	GPS/GLONASS connection icon. If the indicator is grey — receiver is disabled, red — switched on, but the connection is not established, yellow - poor connection, green – connection established. There is a number of the satellites in the dot.
17	Navitel.Friends	Pop-up menu to work with Navitel.Friends service. Here you can add friends, see them on map and talk to them.
18	Route panel	Allows you to see the entire route, your location and traffic jams* on the route directly on the Map page.

Program interface

No.	Name	Function
19	«Save»	Saves current marc on map as a waypoint.
20	«Cursor»	Shows the point menu.

Program interface

No.	Name	Function
21	Mark on the map	You can set the mark by taping on the map. You can save this mark as a waypoint, add it to the route or see object's characteristics the mark was set on.
22	Track record	Track record. Red dot means that the track is recording, grey dot means that the record stopped.
23	Traffic Jams*	Shows the current traffic jams on a 10-point scale.
24	Navitel.SMS*	This button is intended to read/send SMS-messages. Near the icon you can see the number of unread messages.
25	Software update*	Shows available updates.
26	«Go!»	Marks the current position on the map as the end of the route
27	«Route through»	Mark becomes the start point on the route. You should turn off your GPS/GLONASS receiver.
28	«Set start»	Mark becomes the middle point of the route.
29	«Set finish»	Mark on the map becomes the end of the route. And previous end of the route becomes the middle point.
30	Map	Back to map.

* - This function is available only on some devices with GSM or Bluetooth with DUN support. Please, refer to your supplier for more information.

Autorouting

Route to the objects.

To create a route to the object with known address, press the «Menu» button at the lower left corner of the screen [1]. Then select «Find», «By address» [2]. Press the «Select country» button and enter its name [4]. To minimize the keyboard, press the icon at the right top of the screen. Select the required country[5]. Menus «Select city», «Select street» and «Select building» will become active [6]. After choosing the required information press «Go!» to create a route. The route will be shown on the map [8]. You can follow this route or start simulation by pressing the «Demo route» button.

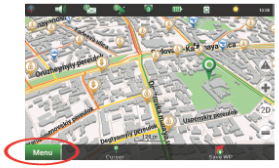

Fig. 1

Fig. 2

Fig. 3

Fig. 4

Fig. 5

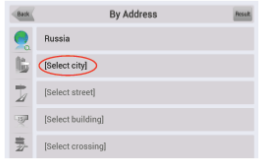

Fig. 6

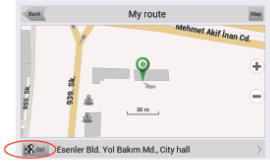

Fig. 7

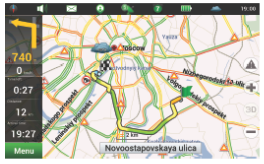

Fig. 8

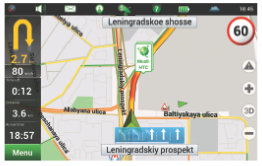

Fig.9

EN

Autorouting

Route to the selected point on the map.

You can set the route to any point on the map. This point will be the end of the route, your current position will become the start of the route. Create a mark on the route by pressing any place on the map[1]. Press the «Cursor», then «Go!»[2]. The route is created[3].

Fig. 1

Fig. 2

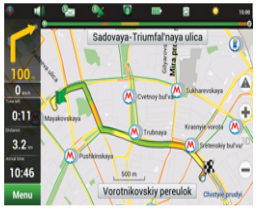

Fig. 3

Route from point to point.

If you want to create a route from point to point you should create a point on the map[1]. Then set this button as a start route by pressing «Cursor» > «Go!». If you didn't turn off your GPS receiver, the system will ask you to do it[3]. The start point will be marked by green flag[4]. Then find the finish point, tap on map and press «Cursor» > «Go!»[5]. The route will be created from point to point.

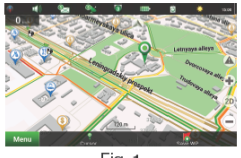
Fig. 1

Fig. 2

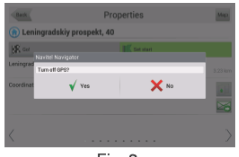

Fig. 3

Fig. 4

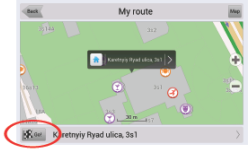

Fig. 5

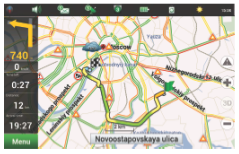

Fig. 6

Additional features

If your device has GSM/GPRS module, you will be able to use some «Navitel Navigator» software features like «Navitel. Traffic Jams» and «Navitel .SMS» services.

Navitel.Traffic

Fig. 1

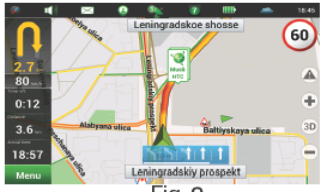

Fig. 2

Using this service you can see the information about the traffic jams.To set the service go to «Settings > «Online services» > «Traffic jams». When the service is active the roads are painted in different colors.

Red - traffic jam, Orange - traffic is bad, Yellow - traffic is a bit difficult, Green - normal traffic[1].

Navitel.Friends

Interactive service «Navitel.Friends» allows you to see the location of your friends on a map in real time, to share your geographic location with friends, send messages or route to meet them.

Note:
For more detailed information regarding the functionality of Navitel software, please, refer to the complete user manual on CD, or to www.prestigio.com.

Troubleshooting

Take steps described in the tables below to solve simple problems before contacting customer service.

NOTE:
Immediately turn off the device and disconnect the power adapter if the device is not working properly. Never try to repair the unit without authorized professionals for it may damage the unit.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Users cannot turn on the unit.	The adaptor is not connected well.	Connect the adaptor correctly.
	The built-in rechargeable battery is weak.	Use the adaptor to supply power or charge the battery.
There is no sound.	The volume may be turned down or mute.	Turn up the volume or turn on the sound output.
There is no picture.	The brightness may be turned down.	Adjust the brightness of the LCD.
The unit cannot receive satellite signals or cannot orient.	The unit work may be obstructed by buildings or metal blocks.	Make sure to use the unit outdoors; if in vehicle, you can use the external GPS antenna to solve this problem.

Troubleshooting

EN

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Irregularity or instability in signal receiving.	The built-in rechargeable battery is weak.	Use the adaptor to supply power or charge the battery.
	The unit may be obstructed by material, such as heat insulation paper.	Remove the material.
	The movement of the unit is too strong.	Avoid any movement of the unit.

PC Connection

To establish connection with PC for data access and synchronization, please execute setup file included in the Driver/Documentation CD or download the file from Microsoft website to install:

Microsoft Active Sync® software for operating system **Microsoft XP or earlier versions** (http://www.microsoft.com/windowsmobile/en-us/downloads/microsoft/activesync-download.mspx)

and/or

Microsoft Mobile Device Center® software for operating system **Microsoft Vista** (http://www.microsoft.com/windowsmobile/en-us/downloads/microsoft/device-center-download.mspx).

Please refer to its user manual for more detailed instructions.

Technical specifications

Model	GV4055/ GV5055
GPS Receiver	MSR2320
Processor	MSB2531A Cortex A7, 800MHz
RAM	128MB DDR2
Display	4.3"/ 5” touch LCD
Resolution	480*272
Storage Capacity	2GB flash memory, Memory card slot supports micro SD card up to 32GB
Interface	Mini USB
Battery	950/ 1050mAh Li-Polymer battery
Dimensions	GV4055: L121mm*H78mm*W12.9mm GV5050: L135mm*H85mm*W12.5mm
Weight	140g/ 170g
Storage Temperature	-25℃~+70℃
Operating Temperature	-20℃~+60℃
Operating Relative Humidity	90%
Storage Relative Humidity	95%

Disclaimer

CE

As the Prestigio products are constantly updated and improved, your device’s software and hardware may have a slightly different appearance or modified functionality than presented in this Quick Start Guide.

Prestigio hereby states that this GPS Navigator complies to basic requirements and another relevant regulations given by the EU directive1999/5/ES. Full version of the declaration of conformity is available on http://www.prestigio.com/compliance.